

Headquarters / Engineering research laboratory : 23 Gunpo Advance d Industry 1-ro(Bugok-dong), Gunpo-si, Gyeonggi-do Tel +82-31-490-0800 Fax +82-31-490-0801

Yeongnam business office / Plant : 55 Gonghangap-gil 85beon-gil, Gangseogu, Busan Metropolitan City Tel +51-973-8518 Fax +51-973-8519

E-mail:info@gastron.com

www.gastron.com



GASTRON

GTD-1000Ex Instruction Manual



Read in detail for correct use.

Gas & Flame Detection System

GASTRON



When abnormalities occur after purchasing the product, please contact the following address.

- · Address : 23 Gunpo Advanced Industry 1-ro, Gunpo-si, Gyeonggi-do
- Tel :031-490-0800
- Fax :031-490-0801
- URL : www.gastron.com
- : info@gastron.com • e-mail

We sincerely thank you for purchasing the product of Gastron Co. Ltd.

Our Gastron Co.Ltd. is a company specialized in Gas detector and Gas Monitoring System, being recognized by many consumers due to the best guality and use convenience. We always enable you consumers to find desired products nearby and are ceaselessly studying and striving for development of Gas detectors satisfying customers. From now on, solve all anguishes concerning Gas detector with the products of Gastron Co. Ltd, We Gastron Co, will take a responsibility and give you satisfaction.

In the present instruction manual, operation method for Gas detector as well as simple methods for maintenance and repair, etc. are recorded If you read it in detail and keep it well, for reference when you have questions, then it will give you much help.

- measurement is recommended.
- Sensor aging.
- should conduct the operation.
- installed cable"
- department, e-mail, or web site.

The present product and the product manual can be changed without advance notice for performance improvement and use convenience of the product.

* KOSHA GUIDE : P-135/6-2018 Calibration must be performed at a frequency requested by the manufacturer and shall be performed quarterly when the calibration period is not specified

For accurate operation of Gas detector, check up and calibrate for more than once in every 6 months. (* In reference to KOSHA GUIDE: P-135/6-2018 / 7.2 In-house inspection, section 2) For accurate operation of Gas detector, checkup and calibration with calibration gas before

When not calibrated, it may cause malfunction of the equipment due to problems resulting from

When the present instrument should be dismantled, those with professional skills for Gas detector

For power supply cable, wire specifications should be determined by referring to the item of "Length of

■ For the contents on checkup and calibration of Gas detector, please use our company's engineering

Contents

1.	Overv	Overview		
2.	Configuration			
3.	Specification			
	3.1.	Specifications	7	
	3.2.	Mechanical Specifications	7	
	3.3.	Electrical Specifications (Standard Type)	8	
	3.4.	Environmental Specifications	8	
4.	Name	and Description of Each Part	9	
	4.1.	Components	9	
5.	Instal	ation	11	
	5.1.	Detachment of Housing Cover	11	
	5.2.	Main PCB Configuration		
	5.3.	Power and Signal Terminal Configuration	13	
	5.4.	Method to Connect to External Control Unit		
	5.5.	Installation Cable Length	15	
6.	Calib	ration and Maintenance	16	
	6.1.	4-20mA Output Diagnosis	16	
	6.2.	Gas Sensor Status Diagnosis	16	
	6.3.	4mA Adjustment (ZERO Calibration)	17	
	6.4.	SPAN Calibration	18	
	6.5.	Gas Detector Calibration Method using Methane(CH4) Standard Gas	19	
7.	Draw	ings and Dimensions	20	
8.	Precautions before Installation			
	8.1.	Selecting a Place for Installation (Occupational Health & Safety Act Data)	21	

8.2. Selecting a Site for Installation (High-P

8.3. Precautions during Installation

9. Revision History

Contents

Pressure Gas Safety Control Act Data)	21
	21
	23


GTD-1000Ex Instruction Manual

GTD-1000Ex toxic gas detector has been developed to detect gas leaked from industrial sites and various toxic gases generated from factories, gas storages, and manufacturing processes that produce or use toxic gases and to prevent accidents in advance.

GTD-1000Ex toxic gas detector is installed in areas with gas leak hazards and continuously monitors gas leak. It displays measurements on LCD of the detector, converts and transmits data in DC 4~20 mA standard output signal. Also, for DC 4~20 mA standard output, output signal transmission length between detector and receiver can be connected up to 2,000 m. (When Cable CVVS or CVVSB 1.5sq and above is used.)

2. Configuration

Body of GTD-1000Ex is made of Aluminum alloy and the gas sensor module is made of stainless steel. It consists of a complete explosion-proof enclosure (Ex d IIC T6). This product can be installed in areas with potential combustible gas leak and explosion hazards and internal structure consists of 1 PCB board with display part for measurements and terminal part that outputs measurements (DC 4 - 20 mA) externally. External configuration consists of detector part that monitors gas leak and cable inlets.

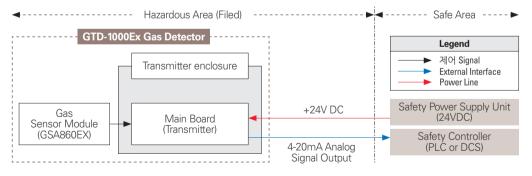

[Figure 1. GTD-1000Ex Overview]

3.1. Basic Specifications

ITEMS
Measuring Type
Measuring Method
Detectible Gas
Measuring Range
Accuracy
Zero Drift
Response Time
Approvals Classification
Basic Interface
Option
Warranty

3.2. Mechanical Specifications

3. Specification

SPECIFICATION		
Diffusion		
- Catalytic Cell)		
- Thermal Conductivity Cell		
- Heated-semiconductor Cell		
Combustible Gas		
0~100% LEL		
\leq ±3% / Full Range		
\leq 2% / Full Range		
90% of full Scale in less than 15 sec		
KCs: Ex d IIC T6		
Analog 4-20mA current interface		
Rain Cover		
Transmitter 2Year		
Sensor 1Year		

SPECIFICATION		
Explosion-proof enclosure		
136(W) × 166(H) × 95 (D) mm		
App. 1.5kg		
Wall mount		
Ø 7 ±0.1		
3/4" PF (1/2" or 3/4" NPT)		
Transmitter aluminum alloy		
Sensor	Stainless Steel (STS316)	


3.3. Electrical Specifications (Standard Type)

ITEMS	SPECIFICATION		
Input Voltage(Standard)	Absolute min:	18V	
※ Customer supplied PSU must meet	Nominal:	24V	
requirements IEC1010-1 and CE	Absolute max:	31V	
Marking requirements.	Ripple maximum allo	wed: 1V pk-pk	
\\/attaga	Max. wattage:	4.8W @+24 VDC	
Wattage	Max. current:	200mA @+24 VDC	
	0-20mA(500 ohms max load) All readings ± 0.2mA Measured-value signal: 4mA(Zero) to 20mA(Full Scale)		
Analog output Current	Fault:		
, thoog output current	0-100% LEL:	4mA - 20mA	
	100-109%LEL:	21.6mA	
	Over 110% LEL:	20mA - 21.4mA	
	Maintenance	3mA	
Analog output current ripple & noise max		±20uA	
	Power	CVVS or CVVSB with shield	
Wiring requirement	Analog	CVVS or CVVSB with shield	
Signal Transmission Distance (Cable Connection Length)	Analog 2500m		
EMC Protection:	Cor	nplies with EN50270	

3.4. Environmental Specifications

ITEMS		SPECIFICATION
Operation Temperature	Transmitter	-20 to 50 °C
Operation Temperature	Sensor	Refer to Sensor Specification
Champer Tanana tan	Transmitter	-20 to 50 °C
Storage Temperature	Sensor	Refer to Sensor Specification
Operation Humidity	Transmitter	5 to 99% RH (Non-condensing)
	Sensor	Refer to Sensor Specification
Pressure Range		90 to 110KPa
Max. air velocity		6m/s

4.1. Components

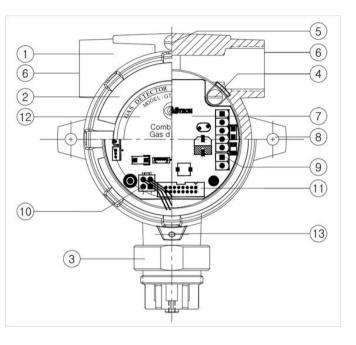

NO	NAME	
1	Detector housing body	Protects PCB Board bu
2	Detector housing cover	It is assembled with de external environmenta
3	Sensor head	It is a site that detects a transmits to the Amp F
4	Internal grand (2sq↑ cable)	It must be grounded to
5	External ground (2sq↑ cable)	It must be grounded to
6	Conduit connection	It is supplied for inlet o installation. For cable in
7	Mount holes(2-Ø7)	Hole to fix the gas dete
8	Amp(main) PCB	Amplifies fine outputs DC standard. It sends o

[Figure 2. GTD-1000Ex Components]

DESCRIPTIONS

uilt in Sensor and Housing from external environmental change and shock. letector housing body and protects PCB Board built in Sensor and Housing from al change and shock

actual gas leak. It converts the amount of gas leak into electrical signal and PCB.

to inside of detector for protection from external noise or strong electric field

to outside of detector for protection from external noise or strong electric field.

of power supply and measurement output signal for the detector during inlet, PF or NPT 1/2", 3/4" are prepared. (Default specification is PF 3/4".)

tector on external wall or other installation sites.

generated from Sensor Element to transmit a converted output in 4~20 mA data to display part.

4.1. Components


No	ITEMS	SPECIFICATION
9	Power/mA terminal	CN1 consists of power input of DC 18~31 V and connection terminal (+, mA, -, ET) for signal output.
10	Sensor terminal	CN2 is Sensor Connection Terminal.
11	Model name plate	Model name, measuring gas, serial number, etc. are labeled.
12	Set screw(M4-L6)	It is a set screw that prevents cover opening from the detector housing body.


[Table 1. GTD-1000Ex Components Description]

must be turned off before performing work.

5.1. Detachment of Housing Cover

Turn the slotted set screw (M4 x 1ea) fixing the cover part of main body 3~4 tuns counter clockwise (ccw) using a hex wrench (M2) then turn the cover of gas leak detector ccw to detach the cover.

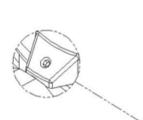

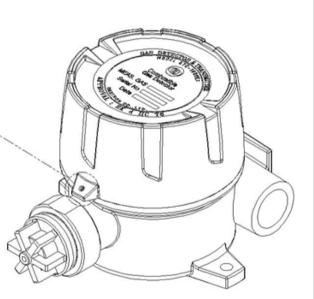

5. Installation

It is prohibited for an individual, other than an approved user or a technician responsible for installation and repair from the head office, to install a gas leak sensor on site or open the cover of the installed gas leak detector and manipulate it. This may cause serious loss of life and property from fire, explosion, and etc. In addition, please check whether there is any remaining explosive gas or combustible material in the surroundings. Power

[Figure 3. Slotted Set Screw]

5.2. Main PCB Configuration

After detaching the cover, the Main PCB terminal layout appears as shown in the figure below.

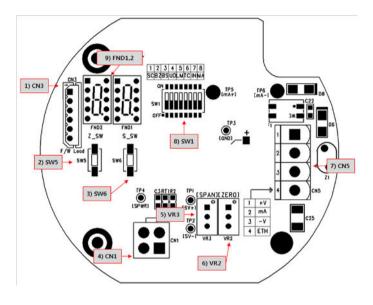



Figure 4. Main PCB Key Layout

No	NAME	DESCRIPTION
1	CN3	Program download Connector
2	SW5	Zero Calibration Switch
3	SW6	Span Calibration Switch
4	CN1	Sensor Connector
5	VR3	Potentiometer for SPAN Output Adjustment
6	VR2	Potentiometer for ZERO Output Adjustment
7	CN5	Power & Output Signal Terminal
8	SW1	Mode Control DIP Switch
9	FND1, 2	FND for Internal Status Display

Table 2. Main PCB Key Part Description

5.3. Power and Signal Terminal Configuration

- After disassembling display parts, there is a terminal block in the Main PCB as shown in the figure below. Holding it with hands and pulling towards ceiling detaches it from the Main PCB.
- Loosen 5 terminal fixing screws located at top part of detached terminal block CN8 (VIS, +, mA, -, ETH) Connector by turning counter-clockwise using a Θ driver. Connect DC 18~24 V power to +, and - then connect signal cable to mA. Tighten 5 terminal fixing screws clockwise so that terminal does not leave the track then insert Main PCB as the same condition before disassembly.

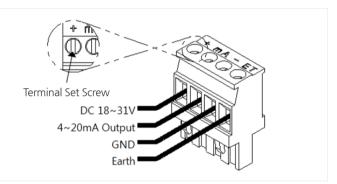

NO	PIN NAME	DESCRIPTION
1	+	+24V / POWER (+)
2	mA	4~20mA Source Out
3	-	GND / POWER (-)
4	ET	EARTH

[Table 3. CN1 Terminal Detailed Description]


■ Use CVVS or CVVSB 2.0sq[↑] Shield Cable for terminal configuration.

5. Installation

[Figure 5. CN1 Terminal Configuration]

5.4. Method to Connect to External Control Unit


Connect 18 V~31 V DC operation power to CN1 (+, mA, -, ET) Connection Terminal of the gas detector then connect a device that can receive 4~20 mA signals to mA.

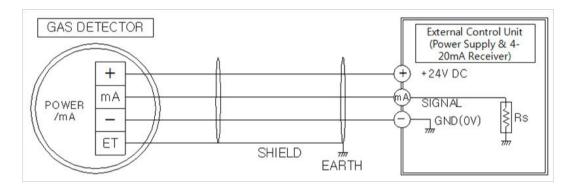

[Figure 6. External Control Unit Connection Method]

5.5. Installation Cable Length

- The maximum length between GTD- 1000Ex and power supply is decided by wire specification. ■ Max. Installation Length = VMAXDROP ÷ IMAX ÷ WIRER/m ÷ 2 ·VMAXDROP: Maximum Power Loop Voltage Drop (=Power Supply voltage
- min operating voltage)
- ·IMAX : Max. Current of GTD-1000Ex
- Example of installation lengths using 24 V power supply and 16 AWG is as follows. •GTD-1000Ex minimum operating voltage = 18 Vdc ·VMAXDROP = 24 - 18 = 6V
- \cdot IMAX = 0.2A(200mA)
- $6 \div 0.2 \div 0.01318 \div 2 = 1138.088 \text{m} \Rightarrow 1138 \text{m}$

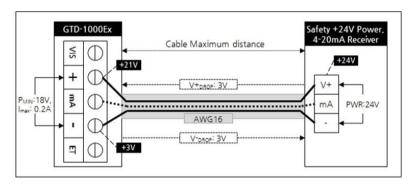

Power cable installation for each cable type is as shown in the table below.

AWG	mm2	COPPER RESISTANCE(ohms/m)	METERS
12	3.31	0.00521	2879
14	2.08	0.00828	1811
16	1.31	0.01318	1138
18	0.82	0.02095	715
20	0.518	0.0333	450

5. Installation

·WIRER/m: The resistance of the wire (ohms/meter value available in wire manufacturer's specification data sheet)

[Figure 7, Calculation of GTD-1000Ex Installation Cable Length]


[Table 4. GTD- 1000Ex Power Cable Installation Length]



Stabilization time of 30 min from the initial supply of operation power to the sensor for the stabilization of the sensor. Calibration and test must be performed approx. 30 min after when the sensor has been stabilized.

6.1. 4-20mA Output Diagnosis


■ It supplies voltage of 18~31 V and current of 200 mA to the sensor. When the voltage is measured by connecting a multimeter to TP5 (+mA) and TP6 (-mA) of AMP PCB, current of 4~20 mA can be confirmed.

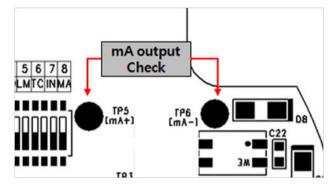

[Figure 8, 4-20mA Output Test Terminal]

6.2. Gas Sensor Status Diagnosis


■ After supplying a voltage of 18~31 V to the sensor, it is normal if a voltage of 2.5 V ~ 2.6 V is measured by connecting multimeter to TP3 (GND) and TP4 (SPWR) of AMP PCB.

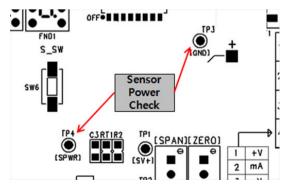

[Figure 9. Sensor Power Test Terminal]

6.3. 4mA Adjustment (ZERO Calibration)

- Check voltage of 18~31 V DC at both (+24 V) and (GND) of terminal block 'N5'.
- Check whether (mA) terminal of terminal block 'CN5' is connected to the receiver.
- Change DMM to current measuring mode, then connect (+) and (-) terminals or DMM to TP5 (+mA) and TP6(-mA) of AMP PCB, respectively.
- When zero switch (SW5) is pressed for 3 sec, a message "[ZE][RO]" flashes 3 times on FND1 and FND2 and it enters zero calibration mode
- When clean air or 99.9% nitrogen (N2) is injected to cell part, 4 mA output is observed. If the output is not 4 mA, adjust the potentiometer 'VR2 (ZERO)' left and right to set 4mA.
- Adjust 'ZERO' potentiometer to obtain a current of 4.00 mA to be displayed on FND1 and FND2.
- When zero switch (SW5) is pressed for 3 sec after output is set to 4 mA, result from zero calibration is displayed on FND1 and FND2. "[PA][SS]" means that the calibration has performed successfully. "[FA][IL]" means that the calibration has not met the condition and failed. In this case, sensor and power must be reconfirmed then calibration shall be performed again.

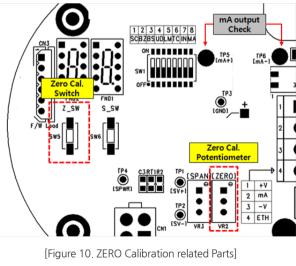


6.4. SPAN Calibration

- Check voltage of 18~31 V DC at both (+24 V) and (GND) of terminal block 'CN5'.
- Check whether (mA) terminal of terminal block 'CN5' is connected to the receiver.
- Change DMM to current measuring mode, then connect (+) and (-) terminals or DMM to TP5 (+mA) and TP6(-mA) of AMP PCB, respectively.
- When span switch (SW6) is pressed for 3 sec, a message "[SP][AN]" flashes 3 times on FND1 and FND2 and it enters span calibration mode
- When the standard calibration gas is injected into cell part, 12 mA output is observed. If the output is not 12 mA, adjust the potentiometer 'VR3 (SPAN)' left and right to set 12 mA.
- Adjust 'SPAN' potentiometer to obtain the correct current output for the standard gas to be displayed on FND1 and FND2
- When SPAN switch (SW6) is pressed for 4 sec after it is set to a desired output, result from span calibration is displayed on FND1 and FND2, "[PA][SS]" means that the calibration has performed successfully, "[FA][IL]" means that the calibration has not met the condition and failed. In this case, sensor and power must be reconfirmed then calibration shall be performed again.

■ CH4 50% LEL calibration output calculation is as follows. Range: 0-100#LEL Output signal : 4-20mA Calibration Gas: CH4 50% LEL /N2 balance Test point signal (TP5, TP6)

50%LEL (Standard Gas) 100%LEL(Full Range) (200 - 40) × -+ 40 = 120 = 12.0mA

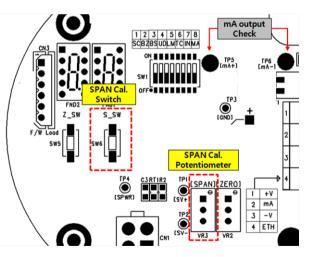

[Figure 11. SPAN Calibration related Parts]

6.5. Gas Detector Calibration Method using Methane(CH4) Standard Gas

- impossible to perform calibration with every standard gas.
- analyzed as shown in the table below.


Gas Type		Explosion Range (VOL%)	Relative Span LEL%(CH4)
Methane	CH4	5.0	100
Propane	C3H8	2.2	80
iso-Butane	C4H10	1.8	80
n-Pentan	C5H12	1.4	80
n-Hexane	C6H14	1.2	75
n-Heptane	C7H16	1.05	65
iso-Octane	C8H18	0.95	60
Methanol	СНЗОН	6.7	130
Ethanol	C2H5OH	3.3	95
iso-Propanol	СЗН7ОН	2.2	80
Acetone	(CH3)2OH	2.6	85
Toluene	C6H5CH3	1.2	70
Ethyl Acetate	CH3COOC2H5	2.2	75
Hydrogen	H2	4.0	125
Ammonia	NH3	15	150
Cyclohexane	C6H12	1.3	75
Acetylene	C2H2	2.5	35
Ethylene	C2H4	2.7	95

When iso-Butane sensor is calibrated with 2.5% methane standard gas, calculate as shown below. (Explosion range of iso-butane is 1.8% and methane is 5%.)

- In sensor, it becomes: (100%LEL ÷ 80%LEL) × (2.5% ÷ 5%) × 100%LEL = 62.5%LEL
- At this time, output from the sensor becomes: 20mA 4mA) X 0.625 + 4mA = 14mA

Combustible gas sensor used for device can measure various types of combustible gas. However, each combustible gas has different properties including explosion range, heat generation rate, specific gravity, etc., therefore, it is

Thus, this product uses methane gas as a reference and applies comparative properties of each combustible gas

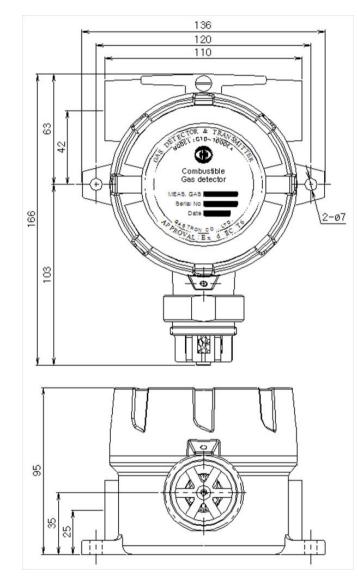

[Figure 12. GTD-1000Ex Drawing]

8.1. Selecting a Place for Installation (Occupational Health & Safety Data)

A gas leak detector alarm shall be installed in the following places.

- heating furnace, etc,
- Areas around equipment for filling combustible and toxic materials.
- Substations, panel rooms, control rooms, and etc. located within explosive area.
- Other areas that are easier for gases to stay.

8.2. Selecting a Site for Installation (High-Pressure Gas Safety Act Data)

Gas detector of gas leak detector alarm must be installed as close to the areas with concerns of gas leakage as possible. However, for areas where direct gas leakage is not expected but are easier for leaked gas to stay, the detector must be installed at the point 1 of the following.

- Gas leak detector alarm installed outside a building shall be installed at points where gas is likely to stay in consideration to wind direction, wind speed, specific gravity of gas, etc.
- Gas leak detector alarm installed inside a building shall be installed near the floor when the specific gravity of gas is heavier than air and near ventilation of ceiling when it is lighter than air.
- Alarm for gas leak detector alarm must be installed at sites where the gas detector is installed and workers are present

8.3. Precautions during Installation


Avoid areas with electrical barriers such as rain water, etc. It is recommended to be installed in areas that are easier to work in since regular maintenance is needed. Avoid areas with vibration or shock since they can affect output values. Sensor part must be installed towards the direction of gravity.

- Allowable temperature is 85 C or below, which corresponds to T6.


Around chemical equipment and accessories that have concerns of gas leak. This includes compressors, valves, reactors, pipe joints, etc. installed inside and outside of a building that handle combustible and toxic materials. Places that are easier for gases to stay such as areas around manufacturing facilities with ignition sources like

This equipment has explosion-proof construction for internal pressure and belongs to GROUP II for gas and vapor in general work sites and chemical plants. It can be used in ZONE 1 (ONE) and ZONE 2 (TWO) hazardous sites.

- Use with surrounding temperature in a range of -20 C ~ 50 C.
- Installation Height: 1,000 M below sea level
- Relative Humidity: 5% ~ 99%
- Installation Site: Indoor and Outdoor
- Explosion Ignition Grade for the Gas or Vapor: Ex d IIC T6
- During wiring work, use explosion-proof cable gland at cable inlet or tightly seal cable conduit during metal cable wiring construction to prevent spread of flames in case of explosion or movement of gas, etc. through the cable conduit within 50 mm. All materials including materials used for sealing of unused inlets must have safety certificates!
- When connecting the equipment with cable, screw thread must be tightened 5 threads or more.
- Work in conditions satisfying other [Standards for Selection, Installation, and Maintenance, etc. of Explosionproof Electric Machine and Equipment Wiring, etc. at Work Site]
- All materials used for cable inlet such as cable gland and sealing fitting, etc. and used as sealing unused inlets must pass the verification!

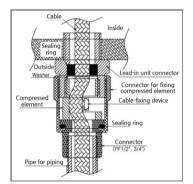

[Figure 13. High-Pressure Packing Type]

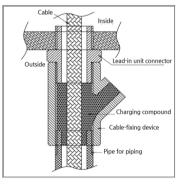

[Figure 14. Y Sealing Compound]

VERSION	CONTENTS	DATE
0.0	* Manual Initial Revision	2013.06.10
1.0	* Drawing and Function Added.	2015.06.29
1.1	* Changed Font	2016.05.19
2.0	* Separated Factory mode manual	2016.09.27
3.0	\star Changed Explosion-proof Equipment Cable Entry Installation Regulation 45 cm \rightarrow 50 mm	2017.01.20

9. Revision History